

May 17, 2016

**For Immediate Release**

*RE: Aquarion<sup>®</sup> Clip Tray Lock*

Encon suggests that the clip tray lock be removed from the Aquarion<sup>®</sup> models listed below sold prior to November 11, 2014.

**AFFECTED MODELS:**

AQ100 - Aquarion<sup>®</sup> Self-contained Eye Wash

AQ100H130 - Aquarion<sup>®</sup> Heated Self-contained Eye Wash

**ACTION FOR USERS:**

Remove the clip tray lock to allow the tray to open more smoothly and the piercing tube to fully engage the Aquarion fluid cartridges. The clips are located where the eye wash tray engages with the shell base, see figure 1.

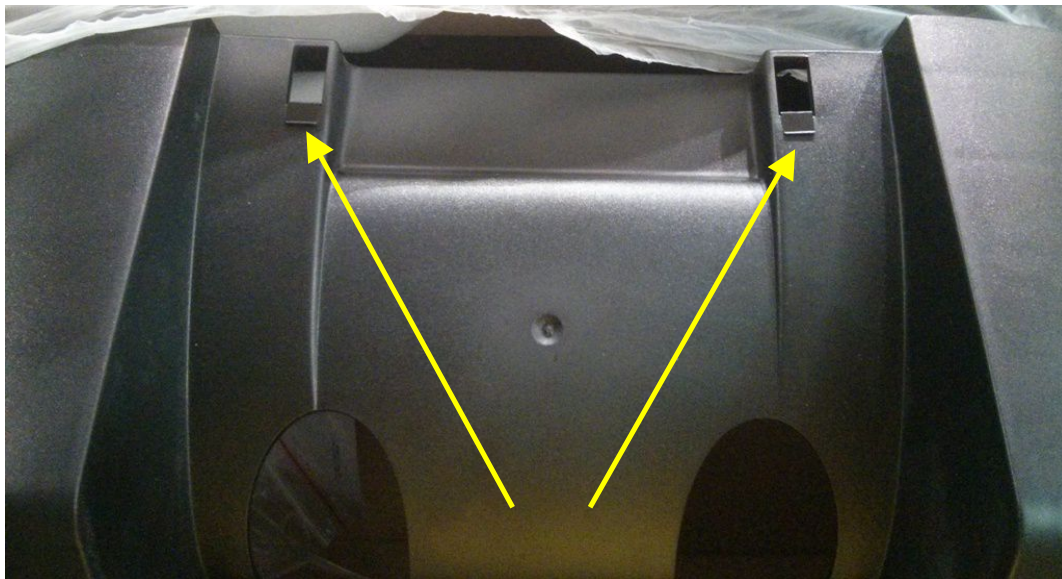


FIG. 1 – Location of Clip Tray Locks

The clip tray lock is easily removed by taking a flat-head screw driver and prying the clip from the base, see figure 2.



FIG. 2 – Use flat-head screw driver to pry off clip