

INSTALLATION INSTRUCTIONS

Instructions for filling the eyewash cartridges

1. Open the AQ111 box. Inside you will find two expiration date labels, a funnel, and two eye wash cartridges with a few ounces of Hydrosep[®] in each bag.



Figure 1: Fill Kit packed in Box.

2. On one of the box flaps you will see a perforated cut. Press firmly on the perforated area to remove the cardboard.



Figure 2: Perforation cut out.

3. With the bag laid out on a flat, stable surface, insert the valve of the Aquarion[®] bag through the hole and slide it back into the thinner slot to keep the bag in place.



Figure 3: Aquarion® valve slid into slot.

4. Removed the tamper evidence seal, compress the white push button and then remove the plug/cap.

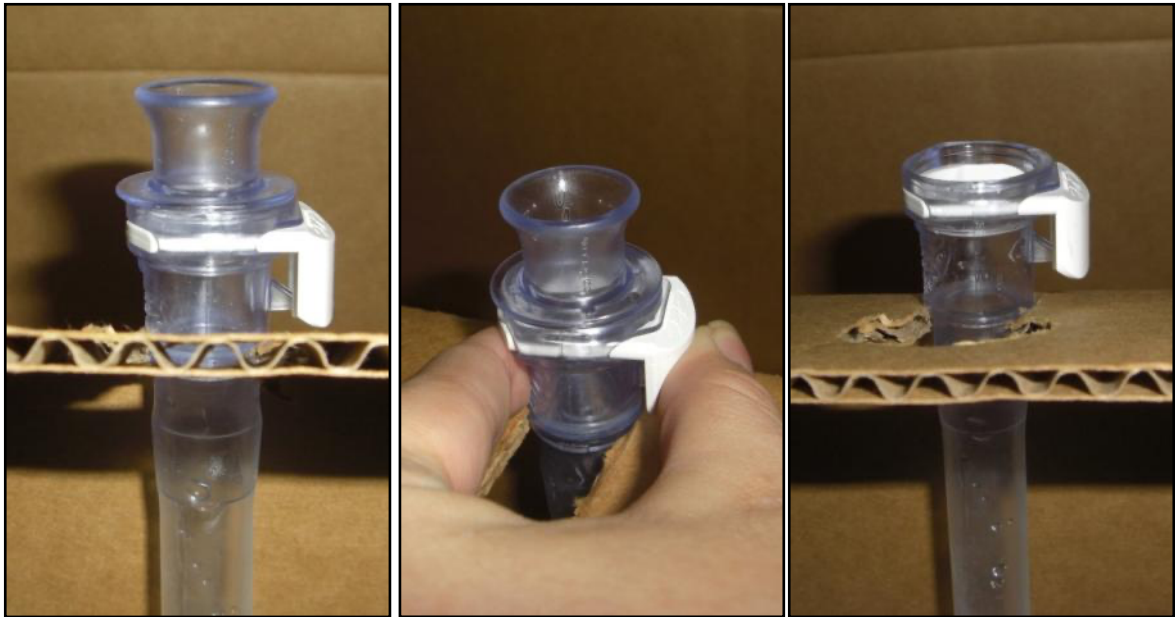


Figure 4: Seal removed, button compressed and cap removed.

5. Place the funnel in the open valve and press down gently to secure it in place.
6. Fill the bag with 4.0-4.2 gallons of deionized potable water (15.1-15.9 L).
Note: Filling the cartridge with the correct amount of water is critical to the system meeting the ANSI Z358.1 Standard.



Figure 5: Funnel installed for filling.

7. Gently lift the bag by the fill port to allow any air bubbles to escape.
8. Replace the cap in the port; it will be secure when the cap clicks into place.
9. Write the date filled on the Aquarion® label provided and place it on the bag.

Note: If at any time the system is activated, the entire cartridge must be replaced as this is a onetime use cartridge.

<p>AQUARION®</p> <p>This cartridge must be discarded after 180 days or 6 months from fill date.</p> <p>Date filled: _____</p> <p>Date expires: _____</p> <p>Encon® phone: 1-800-AT-ENCON SAFETY PRODUCTS email: customerservice@enconsafety.com website: www.enconsafety.com</p> <p>Part number: AQ111</p>

(Fig. 6) Aquarion® expiration label.

10. See Installation, Operation, Maintenance Manual 01999972 for instructions on installing the cartridges.



PROPOSITION 65

WARNING: This product can expose you to BPA, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARRANTY STATEMENT

ENCON HEREBY DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS, EXCEPT AS HEREINAFTER PROVIDED.

Encon Safety Products warrants that for one year from the date of purchase of any Encon products, the product will be free of defects in materials and workmanship if properly used and cared for or cleaned under normal conditions in accordance with Encon's use and care instructions and properly installed, if applicable, in accordance with Encon's installation instructions. With respect to the product, Encon's only obligation and purchaser's exclusive remedy under this warranty is to repair or replace such product; provided that:

1. Encon is notified of the defect within one year of shipment, and
2. the product is determined by Encon to be defective.

Encon requires proof of original ownership as proof of warranty coverage, and Encon must receive any claim under this Limited Warranty within one year of purchase of the product.

NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, ENCON SHALL NOT BE LIABLE FOR LOSS, DAMAGE, OR EXPENSE ARISING DIRECTLY OR INDIRECTLY AS A CONSEQUENCE OF USE OF THE EQUIPMENT WITH OTHER PRODUCTS OR FROM ANY OTHER CAUSE, INCLUDING ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR EXEMPLARY DAMAGES, EXCEPT FOR ENCON'S OBLIGATION TO REPAIR OR REPLACE DEFECTIVE PRODUCTS AS EXPRESSLY PROVIDED IN THIS STATEMENT.

Replacement parts purchased from Encon are warranted for one year following the shipment of such replacement part, or until the expiration of the warranty period for the product, whichever is less. No warranty is given in connection with products that are altered without Encon's expressed written consent. The same warranty limitations and the obligations of Encon as set out herein above shall apply to replacement parts.

Encon's total liability arising out of this warranty (including, but not limited to, warranty claims) regardless of forum and regardless of whether such action or claim is based on tort, contract or otherwise will not exceed the total purchase price of the product.



6825 W. Sam Houston Pkwy. N
Houston, TX 77041
1-800-AT-ENCON / 1-800-283-6266
customerservice@enconsafety.com
<http://www.enconsafety.com>